USER'S MANUAL

DoubleSight™ Dual 17" & 19" LCD MONITOR

(Model : DS-1700S & 1900S)

For the latest updates and more information, visit our website at www.doublesight.com

Trademarks

DoubleSight, DoubleSight Displays, the DoubleSight logo, and other DoubleSight trademarks are the property of DoubleSight Displays, LLC and may be registered in the United States and/or other countries.

Microsoft, Windows, and the Microsoft logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Apple and Macintosh are trademarks or registered trademarks of Apple Computer, Inc. in the United States and/or other countries. Energy Star is a U.S. registered trademark. All other product names, logos, designs, or titles mentioned within this manual may be trademarks of their respective owners.

Disclaimer

DOUBLESIGHT DISPLAYS, LLC MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, REGARDING THIS MANUAL AND THE INFORMATION CONTAINED HEREIN.

DOUBLESIGHT DISPLAYS, LLC HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE AND UNDER NO CIRCUMSTANCES SHALL DOUBLESIGHT DISPLAYS, LLC BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, INFORMATION CONTAINED HEREIN, OR THE USE THEREOF.

Copyright 2003-2004 DoubleSight Displays, LLC. All rights reserved. This manual may not be copied, photocopied, reproduced, translated, or converted to any electronic form in whole or in part without prior written consent of DoubleSight Displays, LLC.

DoubleSight Displays, LLC reserves the right to make any modification to this manual or the information contained herein at any time without notice. DoubleSight Displays, LLC assumes no responsibility for errors or omissions in this manual. For the latest modifications and more information, visit our website at http://www.doublesight.com

Second Edition: November 2005

DoubleSight Displays, LLC
18 Technology # 161
Irvine, CA 92618, U.S.A.
TEL: 1-877-TwoLCDs (1-877-896-5237) (U.S. only)
E-mail: info@doublesight.com

Correct posture for effective use of the LCD monitor.

Placement

Correct placement and adjustment of the monitor can reduce eye, shoulder, and neck fatigue. Check the following when you position the monitor:

Keep the top of the monitor screen slightly below eye level. Your eyes should look slightly downward when viewing the middle of the screen.

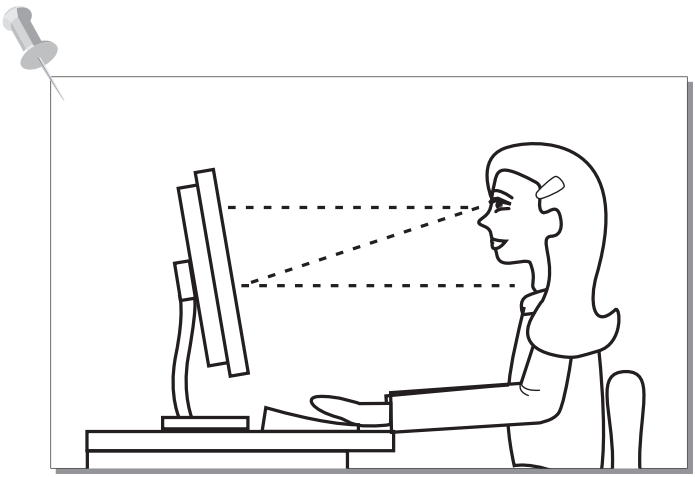

Position your monitor no closer than 16 inches and no further away than 30 inches from your eyes. The optimal distance is 25 inches.

Components

※ Check if all the components are included in the package. Contact the sales outlet if any components are missing.
※ Contact the sales outlet if you wish to purchase optional extras.

Actual components may look different from the pictures below.

Dual LCD Monitor

Quick Guide

Adaptor X2

RGB cable X2

DVI cable X2

Install CD

Handle X2

VESA BRKT

BOLTS(M8)

WASHER/NUT


Power cable X2

WIRE CLIP

Index

Prior to use

Safety Precautions 5–7
Component Name & Introduction 8

Connection & Installation

Setting up the Monitor 9–11
Adjust The Monitor Position 12
Connecting the Monitor to a Computer 13–14
Installing the Monitor Driver 15–17

OSD(On Screen Display)screen select & control

Adjusting the Monitor Screen 18
Picture 19
Color 20
OSD 21
Option 22

Additional Information

Recommendations 23
Self-Diagnosis Function 24
Troubleshooting 25
Product Specification 26
Supported mode table 27
Power Save Mode 27

※ Limited Warranty
※ Regulatory Information

This device has passed the electromagnetic wave test and may be used in any place including residential areas.

Safety Precautions

The contents of this section are intended to protect the user from danger and prevent physical accidents. Please read through the contents for proper use.

Ignoring the safety precautions may lead to accidents causing injury or fatality and structural damage.

Cautions are categorized into two types, "Warning" and "Caution" depending on their level of importance.

Warning : May lead to accidents causing serious human injury

Caution : May lead to minor accidents and damage

Do not use a damaged power cord or plug, or connect to a loose power outlet. Doing so may cause electric shock or fire.

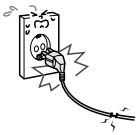

Warning

Do not pull the power cord when unplugging the power, and do not touch the power plug with wet hands. Doing so may cause electric shock or fire.

Warning

Connect the power plug to grounded power outlets only. Failure to do so may cause electric shock or injury.



Warning

Insert the power plug securely into the outlet.
Insecure and unstable electrical contact may lead to fire.



Warning

Do not bend the power cord excessively or allow the cord to be compressed under a heavy object. Doing so may cause electric shock or fire.



Warning

Do not connect more than one plug to a single wall outlet. Doing so may lead to fire.



Warning

Provide sufficient space between the monitor and the wall for ventilation (cooling).
Overheating may lead to fire.



Warning

Make sure that the ventilation holes ARE not covered by fabrics, curtains, other clothe like material, etc.

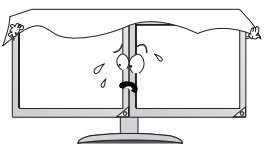

Warning

Place the monitor on a firm flat surface and be careful when handling the monitor.

Mishandling the product may cause short circuits and damage the product or cause injury.

Warning

Do not place candles, lited cigarettes, or other heat-radiating objects on the monitor or near the monitor.

Doing so may lead to fire.

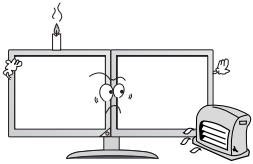

Warning

Disconnect the power when cleaning the product.

Failure to do so may cause electric shock or fire.

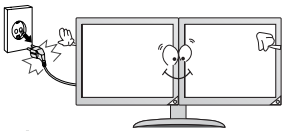

Warning

Do not use flammable sprays or substances near the product.

Doing so may lead to explosion or fire.

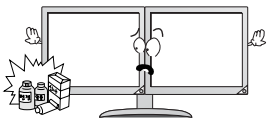

Warning

Do not place the product in a place where the ventilation is poor (eg. inside a cabinet).

Doing so may lead to fire.

Warning

Set the PC to match the resolution and frequency of the monitor.

17", 19 " Types – 1280 x 1024 @ 60Hz

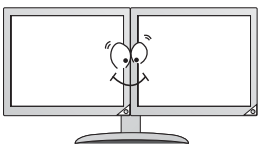

Caution

Safety Precautions

The contents of this section are intended to protect the user from danger and prevent physical accidents. Please read through the contents for proper use.

Set the PC to activate power save mode (DPMS) when the monitor is not used for a while. Set the screen saver function and select a type that maintains motion in the whole screen.

Do not insert metallic objects into the ventilation holes. They may cause electric shock or fire.



Warning

Do not allow children to climb onto the product or hang on it. The product may fall over and cause serious injury.



Warning

Do not attempt to dismantle, repair, or modify the product yourself. This may cause fire or electrical failures.



Warning

Unplug the monitor when not using for a long period of time.
Dust build-up on the product (near the vents) may cause overheating and lead to fire. Use a dry soft cloth for cleaning purposes.

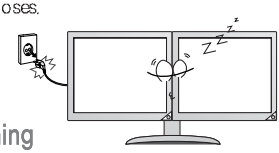

Warning

Carefully unplug the monitor if you see any signs of smoke or smell odor of burning.
Contact the manufacturer for further information.

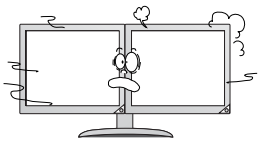

Warning

Use a soft dry cloth to clean the monitor, and unplug it before cleaning.

Do not use any chemical solutions on the monitor for cleaning purposes. Do not use a wet cloth on the monitor.

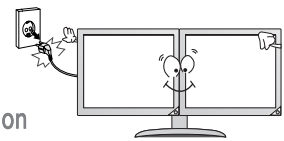

Caution

Do not spray water directly onto the product.
It may cause electrical faults or fire.

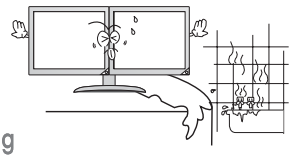

Warning

Do not install the monitor where water (rain) drops can enter the enclosure, or where there is oil or humidity.

It may cause electrical faults, fire, or lead to damage to the monitor.

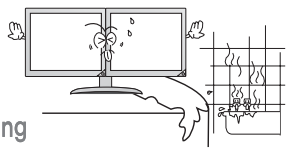

Warning

Clean any dirt, dust or water from the power plug contacts.

They may cause electrical faults or fire.



Warning